







## INSTALLATION INSTRUCTIONS

TY-328-A2


<b>1. DESCRIPTION:</b> Nismo Shift Knob		
<b>2. APPLICATION:</b> 350Z		
<b>3. PART NUMBER:</b> 32865 RN104, 32865 RN105, 32865 RN108, 32865 RN109		
<b>4. KIT CONTENTS:</b>		
<b>Item No.</b>	<b>Qty</b>	<b>Description</b>
1	1	Shift Knob
2	1	Finisher
3	1	Shift pattern sticker (5-speed) (RN108 ONLY)
4	1	Shift pattern sticker (6-speed)
5	1	Installation Instructions
<b>5. TOOLS REQUIRED:</b> Flat-blade screw driver, tape, 2 wrenches, 2 pieces of radiator hose.		
<b>6. INSTALLATION PRECAUTIONS AND NOTES:</b>		
★ You will see various symbols in this manual. They are used in the following ways:		
	<b>WARNING</b>	This is used to indicate the presence of a hazard that could cause death or serious personal injury. To avoid or reduce the risk, the procedures must be followed precisely.
	<b>CAUTION</b>	This is used to indicate the presence of a hazard that could cause minor or moderate personal injury or damage to your vehicle. To avoid or reduce the risk, the procedures must be followed carefully.
<b>Before Installation:</b>		
1. After opening the packing, check to see if any parts are missing and that the product is not damaged.		
2. Install this product while observing all warnings and precautions stated in this manual.		
	<b>WARNING</b>	● Do not make any alteration or modification to this product. Serious injury may result.
	<b>CAUTION</b>	● Before installation, be sure to turn off the engine, set parking brake. If your vehicle moves you could be injured. ● Do not drop or exert a strong impact on the product. This may damage or crack the shift knob.



# INSTALLATION INSTRUCTIONS – NISMO Shift Knob

## 7. 350Z SHIFT KNOB REMOVAL (M/T)

### SERVICE PROCEDURE:

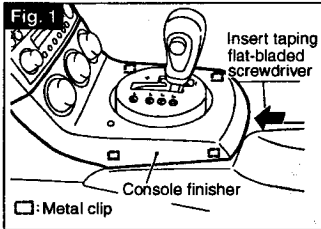


1. Remove the M/T console boot/finisher.

#### Console Boot (M/T)


Insert a thin flat-bladed screwdriver wrapped with tape from behind console boot M/T, and remove metal clip on back. Then pull up and back to disengage from front metal clip.

#### NOTE


- (A/T) shown, but clip location is the same between (M/T) & (A/T).

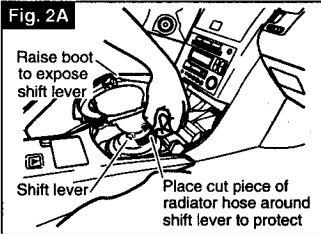

2. Raise the boot so you can see the shift lever. (Fig. 2A)
3. Cut a piece of radiator hose and place it around the shift lever to protect it as you do the following steps. (Fig. 2A)

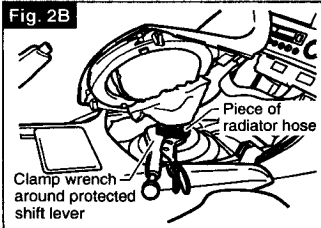

4. Clamp a wrench around the protected shift lever. (Fig. 2B)

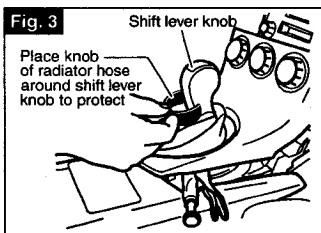


5. Place a 2nd cut piece of radiator hose around the shift lever knob to protect it as you do the following steps. (Fig. 3)

## INSTALLATION INSTRUCTIONS – NISMO Shift Knob

Fig. 4


### CORRECT

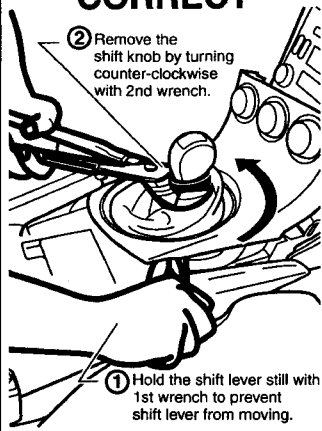

6. Hold the shift lever still with the 1st wrench to keep it from moving. (Fig. 4)
7. With shift lever held in place, remove the shift knob by turning it counter-clockwise with the 2nd wrench. See Figure 4 for the CORRECT way to remove the shift knob. (Fig. 4)

Fig. 5


### INCORRECT

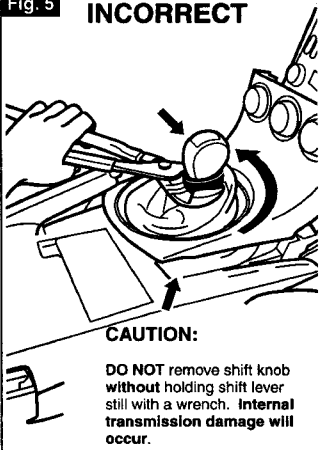

### CAUTION

- The transmission will be damaged internally if you do this step wrong. Do not remove the shift knob without holding the shift lever still with a wrench. The shift lever must not be allowed to rotate.
- Do not remove the shift knob as shown in the figure. (Fig. 5)


Fig. 6

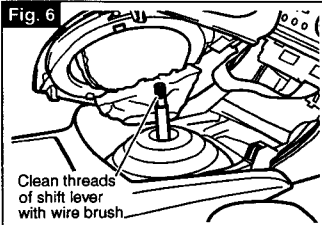

8. Clean the threads of the shift lever with a wire brush. (Fig. 6)

## INSTALLATION INSTRUCTIONS – NISMO Shift Knob

### 8. INSTALLATION PROCEDURE:

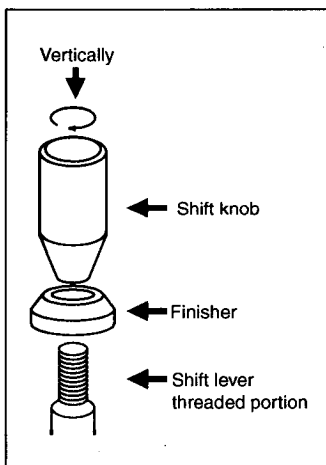

1. Insert finisher.
2. This product adopts a self-tapping method for installation. Screw the shift knob clockwise while pushing it down vertically.
3. Be sure to screw the shift knob until the bottom end of the shift lever contacts the finisher.
4. Align logo on shift knob to face the rear center of the vehicle.
5. Place shift sticker on console finisher so shift pattern is clearly visible to the driver.

#### NOTE

- For titanium shift knobs only, place shift sticker on top of shift knob and align with shift knob logo.